

Basic P1-port default register list

NOTE: Unit-id 200 is default description

	ModbusTCP Register list				
	Address	Type	Scalefactor	writable	unit
Energy Active Positive	0	uint32	1000	no	kWh
Current Instant L1	2	uint32	10	no	A
Current Instant L2	4	uint32	10	no	A
Current Instant L3	6	uint32	10	no	A
Power Instant Active Positive	8	uint32	1	no	W
Power Instant Active Positive L1	10	uint32	1	no	W
Power Instant Active Positive L2	12	uint32	1	no	W
Power Instant Active Positive L3	14	uint32	1	no	W
Voltage L1	16	uint32	10	no	V
Voltage L2	18	uint32	10	no	V
Voltage L3	20	uint32	10	no	V
Energy Active Negative	22	uint32	1000	no	kWh
Power Instant Active Negative	24	uint32	1	no	W

NOTE: uint32 is "swapped" by default.

This register list can be altered by configuration.



<https://energyintelligence.se>